




INSTRUCTIONS

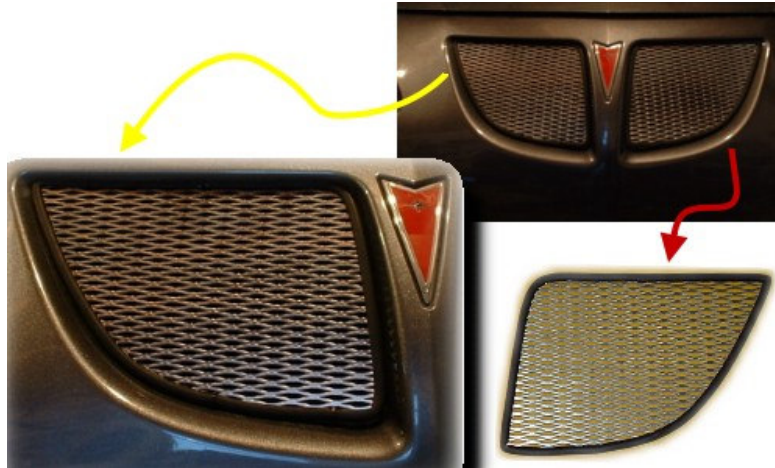

Materials needed: Grills (provided)
Cable Ties (provided)
Wire Cutters

Estimated Install time: 30 minutes

1. To remove the stock inserts you need to pull them out from the front. Typically this can be started by pulling the bottom portion of the insert up and out.
2. Then work your way around grill, pulling each area towards the center of the grill and then out. If you look closely, you can see all the area where the grill snaps in.
3. Once both are out, open the hood.
4. Loosen the top splash guard from the top of the grill area by releasing the fastening mechanisms.
5. Place the left insert on the left grill opening.
6. Have someone hold the grill in. Run a cable tie through a stock grill installation point (starting them from behind the stock grill). Then loop the cable tie back through an adjacent mesh diamond. Check to make sure the cable tie is going around one of the existing grill installation bars
7. Secure the cable tie and repeat this process a few more times so that the grill is secured. We suggest 1 cable tie per stock installation point.
8. Repeat step 6 & 7 for the other section.
9. Clip the ends of the cable ties off
10. Replace and secure the top splash guard, close hood, and enjoy.