

Custom **CARGRILLS.COM**

INSTRUCTIONS




Wire Tie Points

Materials needed: Grills (included)
Metal Wire (included)
Wire Cutters
Screwdriver
Pliers

Estimated Install time: about 30 minutes

1. Start by opening your hood latch and propping your hood up.
2. Remove the splash guard that is held on by plastic screws circled below.

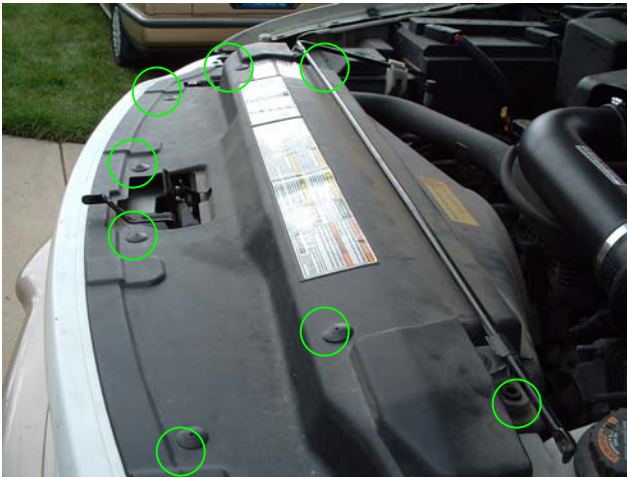

3. Set the splash guard off to the side for now.
4. Place the insert over the stock grill. Be sure to line it up so that the emblem shows through.
5. Attach the grill on.
 - a. Cut the metal wire into 6" strips.
 - b. Bend the wire so that it is in a "V".
 - c. Run the ends of the wire through two adjacent diamond openings.
 - d. Reach through the newly exposed splash area and twist the wire ends
 - e. Tighten down to the desired tension. If you over tighten the grill will "sink in".
 - f. Cut the ends of the wire off to the desired length.
6. Reinstall the splash guard in the reverse of the removal and close hood.